









 

 

 







 

 







 



 

 

 







 

 





 



 

 















Original	Substitut	Original	Substitut
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto









 







 





 

 



 



 



 





 

 



 
 
 

 



















Original	Substitut
 [≡⊕]	 Subtitle / EQ
 [/≡]	 Picture / Format
 [≡X]	 Exit / Cancel / Clear
 [≡↓]	 Zoom / Size
 [≡?]]	 Display / Media
 [≡i]	 Smart / List

Original	Substitut





Original	Substitut	Original	Substitut
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+









































































	Original	Substitut	Original	Substitut
	⏮	PRESET- ⏮		<< / Preset-
	⏭	PRESET+ ⏭		>> / Preset+
	▶	SLOW ▶		Play / Slow
	⏸	STEP-FREEZE ⏸		Pause / Step / Freeze
	■	HOLD ■		Stop / Hold
	Title	TITLE SOUND		Sound / Title
	Open / Close	SURROUND ⏏		Eject / Surround





Original	Substitut	Original	Substitut
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Substitut	Original	Substitut
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Substitut	Original	Substitut
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

Original	Substitut

