

 
 


 
 
 

 
 





 




 
 
 

 
 
 




 


 

 
 

 




 

 





 


 




 

 






 


 

 

 


 

 






 
 


 
 


 
 


Original	Substitut	Original	Substitut
	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

Original	Substitut	Original	Substitut
	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<







 



 


 
 
 

 

 

 
 
 


 

 
 

 
 




 














 

 
 

 



 


 



 







	Original	Substitut	Original	Substitut
	>>		>>	
	[TV]		TV/R	
	D-Menu		Smart	
	TV		Media	
	AV		AV	
	P<P		Pre Ch	
	PP		D. Menu	
	[≡]		Text	
	[≡o]		Subt	
	[≡+]		Format	
	[≡x]		3D	
	[≡◆]/Wide		Shift + Format	
	[≡?]		Options	
	[≡i]/Guide		Guide	
	[::]/Subtitle		Back	





Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio	 + 	Shift + Yellow
	Blue/Angle		Blue
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Time	 + 	Shift + AV
	Zoom	 + 	Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B	 + 	Shift + Play
	C		Yellow
	Title		Info
	Display	 + 	Shift + Info





Original	Substitut	Original	Substitut
	Open/Close		Eject
	Menu		Menu
	Select		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

