 















 
 
 
 
 

 
 


 
 

 
 

 


 




 

 



 
 



 

 


 




 

 
 
 
 






Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	6		6
	5		5
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text
	Shuffle		Media
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Option		Options
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Folder Up		Ch +
	Folder Down		Ch -
	Clear		Exit
	Sleep		Sleep





Original	Substitut
DIMMER Dimmer	SEARCH TV/R TV/R
TP TP	FAV PRE-CH Pre Ch
MONO Mono	SOUND DUAL Dual
PRESET Preset Up	SHIFT +  Shift + Up
PRESET Preset Down	SHIFT +  Shift + Down
MEMORY Memory	REC MODE Rec
TUNING Tuning Up	B Green
TUNING Tuning Down	A Red
CD CD	SHIFT + 1 Shift + 1
USB USB	SHIFT + 2 Shift + 2
AUX AUX	SHIFT + 3 Shift + 3
TUNER Tuner	SHIFT + 4 Shift + 4
iPod iPod	SHIFT + 5 Shift + 5
 Folder Up iPod	SHIFT + + CH Shift + Ch +
 Folder Down iPod	SHIFT + - CH Shift + Ch -
REPEAT Repeat iPod	HOME SMART Smart
SHUFFLE Shuffle iPod	SHIFT + APP MEDIA Shift + Media

Original	Substitut
ENTER Enter iPod	SHIFT + OK Shift + Ok
 >>I iPod	SHIFT +  Shift + Right
 I<< iPod	SHIFT +  Shift + Left
MENU Menu iPod	TOP MENU MENU Menu
 Play/Pause iPod	SHIFT + PLAY MODE Shift + Play
 Open/Close	ZOOM Eject
CLOCK Clock	E-MANUAL D.MENU D. Menu
TIMER Timer	TIMER AV AV

