
 















 
Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substitut
	
	
	
	
	
	
	
	















 

 











 

 

Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play/Memory		Play / Slow
	Pause/Preset		Pause / Step / Freeze
	Stop/Preset Up		Stop / Hold
	<</Tuning Up		<< / Tune-
	>>		>> / Tune+
	I<</Tuning		I<< / Preset-
	>>I		>>I / Preset+
	Music		Sound / Title
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	Movie		Picture / Format
	Sleep		Sleep / Timer
	TV		TV/Radio /
	Sur Decode		D.Menu / Top
	Setup		Setup / OPT /

Original	Substitut	Original	Substitut
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	iPod		Smart / List
	Vol-		Vol-
	Entertainment		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Substitut	Original	Substitut
	Power		Power
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Return		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Original	Substitut	Original	Substitut
	9		9
	0		0
	+10		Guide / EPG / -/-
	ENT		Fav / Marker / PC
	<<		>> / Tune+
	Stop		Stop / Hold
	>>		I<< / Preset-
	I<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Play		Play / Slow

