






 







| Original | Substitut | Original | Substitut |
|---|---|--|---|
|  Power |  Power |  Right |  Right |
|  1 |  1 |  Left |  Left |
|  2 |  2 |  Enter/OK |  Ok |
|  3 |  3 |  I<< |  I<< |
|  4 |  4 |  >>I |  >>I |
|  5 |  5 |  Play |  Play |
|  6 |  6 |  Stop |  Stop |
|  7 |  7 |  Pause |  Pause |
|  8 |  8 |  Subtitle |  Subt |
|  9 |  9 |  Audio |  Dual |
|  0 |  0 |  Zoom |  Eject |
|  Menu |  Menu |  Angle |  Red |
|  Top |  Back |  Repeat |  Text |
|  On Screen |  Info |  A-B |  Green |
|  Setup |  Options |  Scan |  Media |
|  Up |  Up |  Mute |  Mute |
|  Down |  Down | | |

| Original | Substitut | Original | Substitut |
|---|--|--|---|
|  Power |  Mute |  Right |  Right |
|  TV |  DVD |  Left |  Left |
|  SAT |  AUX |  Enter/OK |  Ok |
|  Play Mode |  Rec Mode |  I<< |  I<< |
|  I<< |  I<< |  >>I |  >>I |
|  Play |  Play |  Stop |  Stop |
|  Pause |  Pause |  Subtitle |  Subt |
|  Audio |  Dual |  Zoom |  Eject |
|  Angle |  Red |  Repeat |  Text |
|  A-B |  Green |  Scan |  Media |
| Mute | Mute | | |

