



Original	Substitut
	Power
	Party
	HDMI Out
	BD/DVD Scene
	TV Scene
	NET Scene
	Radio Scene
	USB
	Program Up
	Program Down
	Mute
	Volume+
	Volume-
	Pop-Up/Menu
	Top Menu
	Option
	On Screen

Substitut	Original
Power	
Smart / List	
Shift + Display / Media	
Red / Netflix / Search	
Green / APP / Repeat	
Yellow / YouTube / Repeat	
Blue / Prime Video / Random	
TV/Radio /	
CH+ / Page+	
CH- / Page-	
Mute / Dimmer	
Vol+	
Vol-	
Menu / Home	
D.Menu / Top	
Setup / OPT /	
Shift + Smart / List	

Original	Substitut
	Display
	Return
	Up
	Down
	Enter
	Right
	Left
	Mode
	Stop
	Pause
	Play/Band
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Movie
	Audio

Substitut	Original
Display / Media	
Back / Return	
Up	
Down	
OK	
Right	
Left	
Picture / Format	
Stop / Hold	
Pause / Step / Freeze	
Play / Slow	
<< / Tune-	
>> / Tune+	
I<< / Preset-	
>>I / Preset+	
Subtitle / EQ	
Audio / Lang I/II	





Original	Substitut
 Music	 Sound / Title
 Sur Decode	 Text / Goto
 Straight	 AV / Input / RDS
 Enhancer	 Zoom / Size
 Pure Direct	 Exit / Cancel / Clear
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Substitut
 Memory	 Guide / EPG / -/--
 ENT	 Fav / Marker / PC
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 V-AUX	 Shift + Zoom /
 AV 1	 Shift + 7
 AV 2	 Shift + 8
 AV 3	 Shift + 9
 AV 5	 Shift + 0
 AV 4	 Shift + Guide / EPG / -/--
 Tuner	 Shift + 6
 AV 6	 Shift + Fav / Marker / PC
 Bluetooth	 Eject / Surround
 Net	 Shift + Blue / Prime Video / Random





Original	Substitut
	Power
	Party
	HDMI Out
	BD/DVD Scene
	TV Scene
	NET Scene
	Radio Scene
	Program Up
	Program Down
	Volume+
	Volume-
	Mute
	Pop-Up/Menu
	Top Menu
	On Screen
	Return
	Option
	Power
	Smart / List
	Shift + Display / Media
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	CH+ / Page+
	CH- / Page-
	Vol+
	Vol-
	Mute / Dimmer
	Menu / Home
	D.Menu / Top
	Shift + Smart / List
	Back / Return
	Setup / OPT /

Original	Substitut
	Display
	Up
	Enter
	Down
	Right
	Left
	Mode
	Stop
	Pause
	Play/Band
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Info
	Sleep
	1
	Display / Media
	Up
	OK
	Down
	Right
	Left
	Picture / Format
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Info / Angle
	Sleep / Timer
	1





Original	Substitut
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Memory
	ENT
	HDMI 1
	HDMI 2
	HDMI 3
	HDMI 4
	HDMI 5
	V-AUX

Original	Substitut
	AV 1
	AV 2
	AV 3
	AV 5
	AV 4
	Audio
	AV 6
	Bluetooth
	Tuner
	Net
	USB

