



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Lang		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡]..		Sound / Title
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3

Original	Substitut	Original	Substitut
	4		4
	5		5
	6		6
	7		7
	8		8
	TV		TV/Radio /
	9		9
	0		0
	Recall		Fav / Marker / PC
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear





Original		Substitut	
	Q.Menu		D.Menu / Top
	Internet		Smart / List
	Music/Photo/Video		Display / Media
	* / 0	 + 	Shift + Green / APP /
	* / Q	 + 	Shift + Red / Netflix /
	Tv Guide		Guide / EPG / -/-
	Vol+		Vol+
	P+		CH+ / Page+
	i		Info / Angle
	Mute		Mute / Dimmer
	Text		Text / Goto
	Vol-		Vol-
	P-		CH- / Page-
	Size		Zoom / Size

