

 





 




Original	Substitut	Original	Substitut
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Menu	 Menu / Home
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 FAV	 Fav / Marker / PC
 /--	 Shift + Guide / EPG / /--	 P.Mode	 Picture / Format
 Recall	 Back / Return	 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Audio	 Audio / Lang I/II	 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Menu	 Menu / Home
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 FAV	 Fav / Marker / PC
 /--	 Shift + Guide / EPG / /--	 P.Mode	 Picture / Format
 Recall	 Back / Return	 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Audio	 Audio / Lang I/II	 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search





Original	Substitut	Original	Substitut
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Setup		Setup / OPT /
	Refresh		Display / Media
	Text		Text / Goto
	Play		Play / Slow
	EPG/Mouse		Guide / EPG / -/--
	I<<		I<< / Preset-
	Stop/Reveal		Stop / Hold
	Rec		Rec / Rec Mode
	Size		Zoom / Size
	Pause/Mix		Pause / Step / Freeze
	<</Hold		<< / Tune-
	Tv/Radio		TV/Radio /
	>>/Subpage		>> / Tune+

