

PANASONIC
HIFI
N2QAYC000027



Mandis Shop S.L.
Sant Cugat del Vallès - Barcelona
info@mandis.es

Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
MUTE	Mute				
SRC	VS				
POWER	Power				
GOTO					
RANDOM					
ANGLE					
BAND					
SLOW					
STEP					
EQ					
CLEAR	Clear-Mode Dialog				
/^+	Subwoofer+				
V/-	Subwoofer-				
VOL+	Vol+				
VOL-	Vol-				
/^					
V					
<					
>					
OK					
1 SETUP	TV Input Selector				
2 MENU					
3 EXIT					
4 MODE	BD/DVD Input Selector				
5 AUDIO	Sound Effect				
6 SUBT					
7 REPEAT					
8 A-B					
9 DISP					
0 ZOOM					
-- SEARCH					