 





 




 



 

 







Original	Replacement	Original	Replacement
System Off	Power	5	5
Sleep	Sleep / Timer	6	6
Tv Control On	Shift + Power	7	7
Tape	Shift + 5	8	8
DAT/MD	Shift + 2	9	9
CD	Shift + 3	0	0
Tuner	Shift + 6	>10	Guide / EPG / -/--
Phono	Shift + 0	Index/Tv Video	TV/Radio /
Video 1	Shift + 4	CH/Preset+	CH+ / Page+
Video 2	Shift + 7	CH/Preset-	CH- / Page-
Video 3	Shift + 8	DPC Mode	Picture / Format
LD	Shift + 9	Band EQ	Green / APP / Repeat
TV	Shift + Guide / EPG / -/--	Slope EQ	Yellow / YouTube / Repeat
1	1	EQ Tone On/Off	Blue / Prime Video / Random
2	2	Up	Up
3	3	Down	Down
4	4	Right	Right





Original	Replacement	Original	Replacement
 Left	 Left		
 < Sound Field	 << / Tune-		
 Sound Field Mode	 >> / Tune+		
 Sound Field	 Red / Netflix / Search		
 Rear Level+	 Shift + CH+ /		
 Rear Level-	 Shift + CH- /		
 Center Level+	 Shift + Up		
 Center Level-	 Shift + Down		
 Test Tone	 Smart / List		
 Bass Boost	 Display / Media		
 Master Vol+	 Vol+		
 Master Vol-	 Vol-		
 Muting	 Mute / Dimmer		

Original	Replacement





Original	Replacement	Original	Replacement
System Off	Power	Stop	Stop / Hold
1	1	Play	Play / Slow
2	2	Pause	Pause / Step / Freeze
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
>10	Guide / EPG / -/--		
<<	<< / Tune-		
>>	>> / Tune+		
<<	<< / Preset-		
>>	>> / Preset+		
D.Skip	Blue / Prime Video / Random		











 

 


 


 

 




 

 

 









Original	Replacement
System Off	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10	Guide / EPG / -/--
Enter	OK
<</Sub CH-	<< / Tune-
>>/Sub CH+	>> / Tune+
Stop	Stop / Hold
<	Left

Original	Replacement
>	Right
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode





Original	Replacement
 System Off	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <</Sub CH-	 << / Tune-
 >>/Sub CH+	 >> / Tune+
 <</Posi	 << / Preset-
 >> /Swap	 >> / Preset+
 Stop/Clear	 Stop / Hold
 Play	 Play / Slow

Original	Replacement
 Pause/P in P	 Pause / Step / Freeze
 Rec/Jump	 Rec / Rec Mode

