Mandis shop

RM-SUXN1R

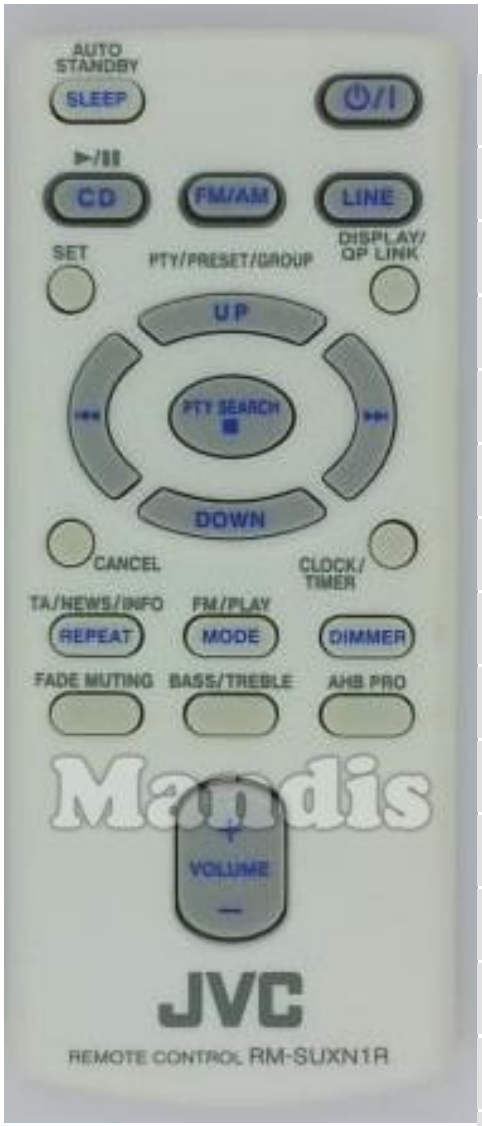

Original		Substitut	
	Power		Power
	Sleep/Auto	PROG SLEEP	Sleep
	Play/Pause CD	PLAY MODE	Play
	FM/AM	SOUND DUAL	Dual
	Line	DISC NAV LIST	List
	Set	SETTINGS OPT	Options
	Display/QP Link	DISPLAY INFO	Info
	PTY/Preset/Group		Up
	PTY/Preset/Group Down		Down
	>>I		>>I
	I<<		I<<
	PTY Search	OK	Ok
	Stop		Stop
	Cancel	CLEAR EXIT	Exit
	Clock/Timer	TIMER AV	AV
	Repeat/TA/News/I	REPEAT TEXT	Text
	Mode/FM/Play	HOME SMART	Smart

Original		Substitut	
	Dimmer	AD SUBT	Subt
	Fade Muting	MUTE	Mute
	Bass/Treble	ECO 3D	3D
	AHB Pro	ZOOM	Eject
	Volume +	VOL +	Vol +
	Volume -	VOL −	Vol -

https://mandis.cat/ca/1061488-12462-comandament-de-substitucio-per-RM-SUXN1R.html