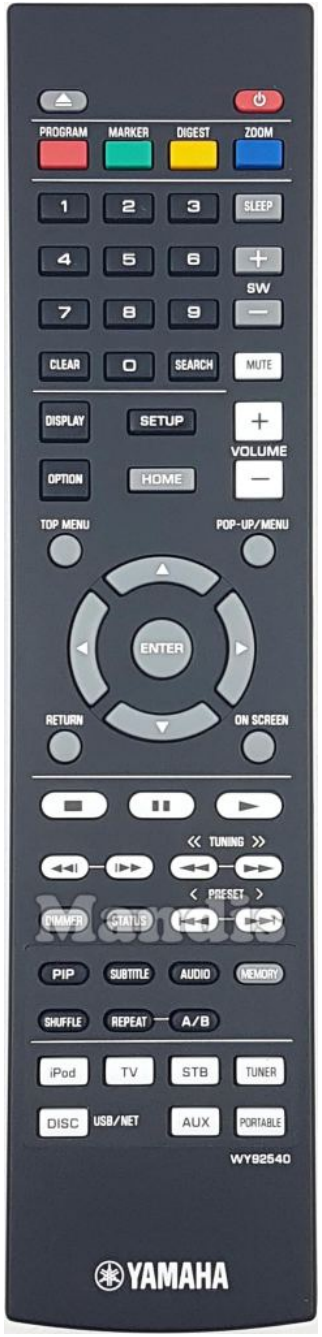

Original		Substitut	
	Open/Close	SURROUND	Eject / Surround
	Power		Power
PROGRAM	Red/Program	NETFLIX SEARCH	Red / Netflix / Search
MARKER	Green/Marker	APP REPEAT	Green / APP / Repeat
DIGEST	Yellow/Digest	YouTube REPEAT A-B	Yellow / YouTube / Repeat
ZOOM	Blue/Zoom	Prime Video RANDOM	Blue / Prime Video / Random
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
SW+	SW+	CH PAGE	CH+ / Page+
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9

Original		Substitut	
SW	SW-	CH PAGE	CH- / Page-
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
0	0	HDMI-SAT 0	0
SEARCH	Search	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
DISPLAY	Display	MEDIA DISPLAY	Display / Media
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
VOLUME +	Volume+	VOL +	Vol +
OPTION	Option	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
HOME	Home	HOME MENU	Menu / Home
VOLUME −	Volume-	VOL −	Vol -
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up/Menu	LIST SMART	Smart / List
	Up		Up
	Left		Left
ENTER	Enter	OK	OK
	Right		Right

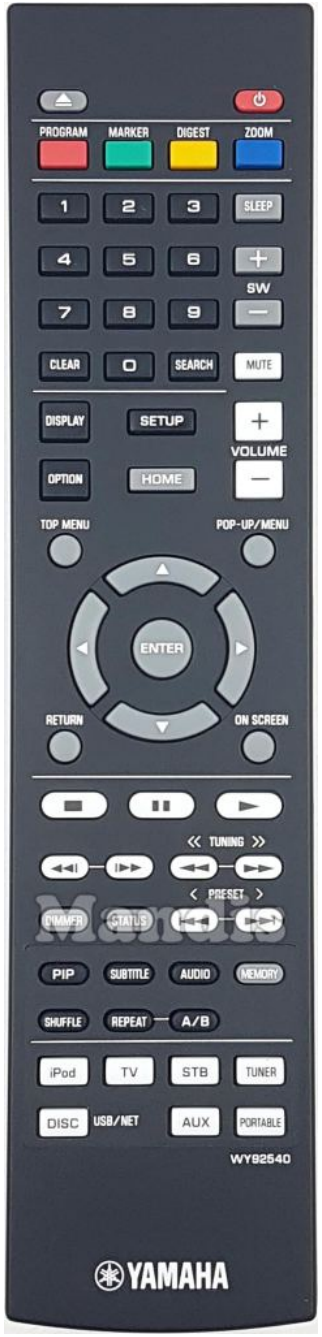

Original	Substitut
Return	Back / Return
Down	Down
On Screen	Picture / Format
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
<<I	I<< / Preset-
I>>	>>I / Preset+
<< / << Tuning	<< / Tune-
>> / Tuning >>	>> / Tune+
Dimmer	Shift + Mute / Dimmer
Status	Text / Goto
I<< / < Preset	Shift + I<< / Preset-
>>I / Preset >	Shift + >>I / Preset+
PIP	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Substitut
Memory	Shift + Smart / List
Shuffle	Shift + Eject / Surround
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
iPod	Shift + Display / Media
TV	TV/Radio /
STB	Shift + 3
Tuner	Shift + 6
Disc/USB/Net	Shift + 8
AUX	Shift + 7
Portable	AV / Input / RDS